

# Quick Start

## Riōvolt<sup>™</sup>

 
### SP150

For detailed instructions and descriptions please see the User's Guide located online at [www.sonicblue.com/support](http://www.sonicblue.com/support)

P/N 41000695-001

## 2 Insert Batteries

1. Slide open the battery compartment cover on the back of the RioVolt.
2. Insert the two supplied 1.5 volt AA batteries. Ensure the batteries are inserted properly by matching the + and - on the battery with the symbols on the RioVolt.
3. Replace the battery compartment cover.

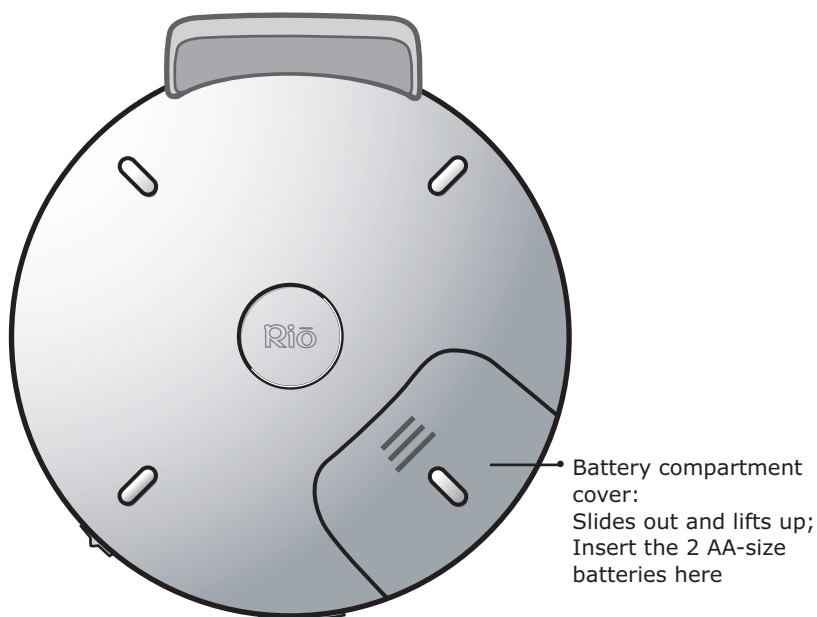

## 4 Insert Disc

Your RioVolt supports the following music formats:

- MP3 digital music files
- WMA digital music files
- Standard music CDs (Red Book)

1. Press the OPEN button to release the latch and open the player.
2. Insert an audio CD or MP3/WMA CD into the player, label side up.
3. Close the player.

**Tip:** The RioVolt SP150 can play CDs with the following logos:



## 5 Play Disc

1. Press and hold the PLAY/PAUSE ►|| button to turn on the player and begin playback.

 
**Note:** There will be a short delay while the player loads your music tracks and track information.

2. Press the STOP ■ button to stop playback. Press STOP again to turn off the player.


Welcome to the RioVolt SP150, your complete portable solution for audio CD and MP3/WMA CD playback. The SP150 includes Electronic Shock Protection (ESP), which buffers up to 16 minutes of digital audio to prevent skipping. Follow these steps to get started:

## 1 Unpack


Make sure your package includes the following:

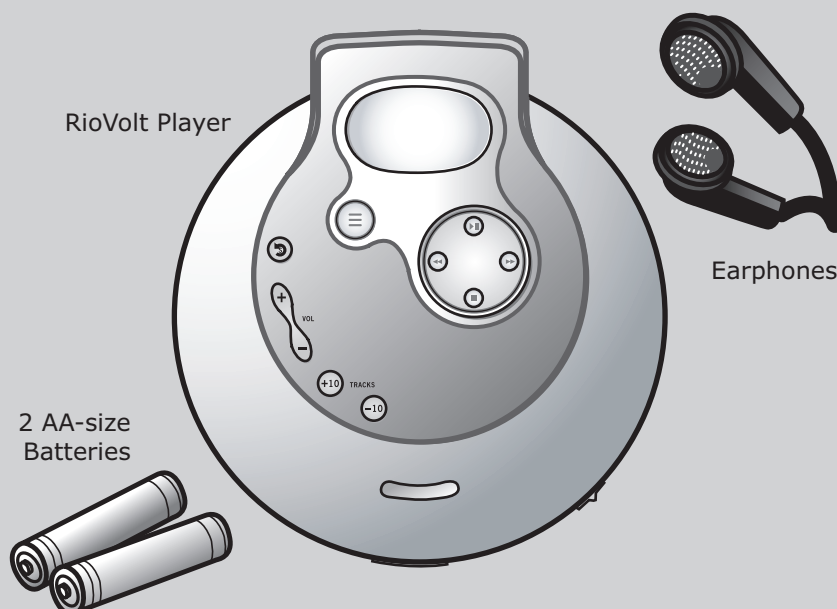

## 3 Connect Earphones

Connect the supplied earphones to the MULTIFUNCTION port  on the side of the player.

 **Tip:** You can also use the LINE OUT jack to connect the player to an external audio system.

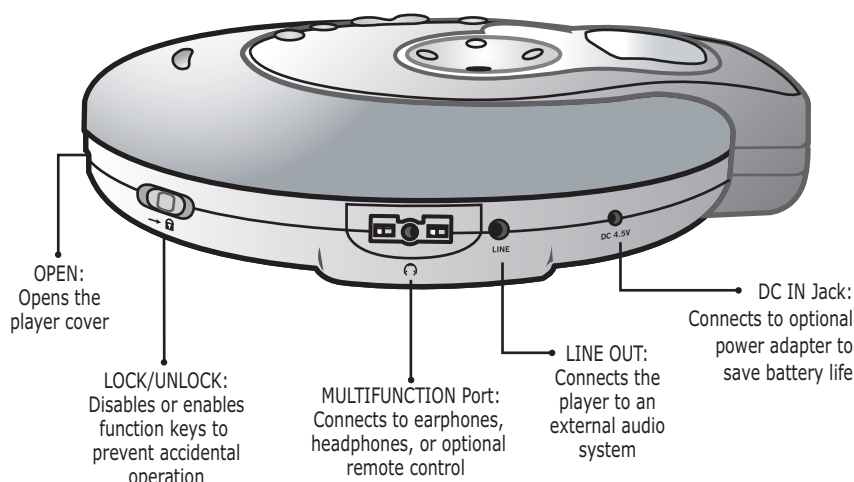

**Accessories**  
for your RioVolt can be found  
online at [store.sonicblue.com](http://store.sonicblue.com)

## Customer Care

### Web site

[www.sonicblue.com/support](http://www.sonicblue.com/support)

### E-mail

[customersupport@sonicblue.com](mailto:customersupport@sonicblue.com)

### Technical Support Telephone

Call for answers to technical questions about your product.  
(503) 453-1640

### Customer Service Telephone

Call for sales and general product information.  
(800) 468-5846

### Hours

Please check the support Web site for the current hours of operation.

**SONICblue<sup>™</sup>**

© 2002 SONICblue Incorporated. All Rights Reserved.

SONICblue Incorporated shall not be liable for any errors contained herein or for any damages arising out of or related to this document or the information contained herein, even if SONICblue has been advised of the possibility of such damages. This document is intended for informational and instructional purposes only. SONICblue reserves the right to make changes in the specifications and other information contained in this document without prior notification. SONICblue disclaims any obligation to update the information contained herein. Rio® is a registered trademark of SONICblue Incorporated. SONICblue and RioVolt are trademarks of SONICblue Incorporated. Microsoft, Windows Media, and the Windows Logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. All other brand or product names may be trademarks of the companies with which they are associated.